

North American Response Centers

HP 3000 APPLICATION NOTE #23



VFC FILES



March 1, 1987
Document P/N 5958-5824R2709

HP 3000 APPLICATION NOTES are published by the North American Response Centers twice a month and distributed with the Software Status Bulletin. These notes address topics, where the volume of calls received at the Centers indicates a need for addition to or consolidation of information available through HP support services. You may obtain previous notes (single copies only, please) by returning the attached Reader Comment Sheet listing their numbers.

<u>Note #</u>	<u>Published</u>	<u>Topic</u>
1	2/21/85	HP 3000 Printer Configuration Guide (superseded by note #4)
2	10/15/85	Terminal Types for HP 3000 HPIB Computers (superseded by note #13)
3	4/01/86	HP 3000 Plotter Configuration Guide
4	4/15/86	HP 3000 Printer Configuration Guide - Revised
5	5/01/86	MPE System Logfile Record Formats
6	5/15/86	HP 3000 Stack Operation
7	6/01/86	COBOL II/3000 Programs: Tracing Illegal Data
8	6/15/86	KSAM Topics: COBOL's Index I/O; File Data Integrity
9	7/01/86	Port Failures, Terminal Hangs, TERMDSM
10	7/15/86	Serial Printers - Configuration, Cabling, Muxes
11	8/01/86	System Configuration or System Table Related Errors
12	8/15/86	Pascal/3000 - Using Dynamic Variables
13	9/01/86	Terminal Types for HP 3000 HPIB Computers - Revised
14	9/15/86	Laser Printers - A Software and Hardware Overview
15	10/01/86	FORTRAN Language Considerations - A Guide to Common Problems
16	10/15/86	IMAGE: Updating to TurboImage & Improving Data Base Loads
17	11/01/86	Optimizing VPLUS Utilization
18	11/15/86	The Case of the Suspect Track for 792X Disc Drives
19	12/01/86	Stack Overflows: Causes & Cures for COBOL II Programs
20	1/01/87	Output Spooling
21	1/15/87	COBOLII and MPE Intrinsic
22	2/15/87	Asynchronous Modems

NOTICE

The information contained in this document is subject to change without notice.

HEWLETT-PACKARD MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance or use of this material.

This document contains proprietary information which is protected copyright. All rights are reserved. Permission to copy all or part of this document is granted provided that the copies are not made or distributed for direct commercial advantage; that this copyright notice, and the title of the publication and its date appear; and that notice is given that copying is by permission of Hewlett-Packard Company. To copy otherwise, or to republish, requires prior written consent of Hewlett-Packard Company.

HP Computer Museum
www.hpmuseum.net

For research and education purposes only.

VFC FILES

The purpose of this Application Note is to provide an overview of Forms Control (VFC) and to supplement Chapter 8 of the *System Operation and Resource Management Reference Manual* (Part No. 32033-90005). This note contains a general description of VFC including a table which describes the standard VFC channel definitions and a table on the action taken by the printer when a channel is selected. The next section describes the format of the VFC file followed by four examples of VFC files.

WHAT'S VFC ALL ABOUT?

VFC allows you to specify how your printouts will appear when they are printed on the printer. Most customers use the HP default VFC, but when you need to print special forms (such as those used for printing paychecks or invoices) you can design your own VFC.

Carriage Control (CCTL) is a single byte at the beginning of each record of a file defined with CCTL. The carriage control byte tells the printer which VFC channel to use. The actions that HP printers will take with the HP standard VFC are specified in Table 1.

The printer may either execute the carriage control before printing the line (pre-space mode) or after (post-space mode). The default on the 3000 is post spacing, with two exceptions. COBOL (when using the AFTER ADVANCING clause) and FORTRAN default to pre-space mode.

This discussion pertains to electronic VFCs that can be used with the 2608A/S and 256x printers with an HPIB interface. This does not apply to printers connected to ADCC/ATP serial ports.

The VFC file is created with the Editor and is downloaded to the printer with the :DOWNLOAD command or by using the ";ENV=" parameter of the :FILE command. The :DOWNLOAD command should always be used with the 2608A printer. The ";ENV=" parameter of the file command should be used with the 2608S and 256x printers. The :DOWNLOAD command will work with the 2608S and 256x printers, but eliminates the ability of the printer to recover automatically from a power failure. The :DOWNLOAD command can also hang a 2608S or 256x printer if the command is issued when another spoolfile is active. The system must then be restarted to clear the printer. Please refer to the MPE Commands Reference Manual for the use and syntax of the :DOWNLOAD and :FILE commands.

Table 1. VFC Channel Definitions

Channel	Definition
1	Top of Form (line 1)
2	Bottom of Form (BOF (last line of text))
3	Single space (lines 1,2,3,4...)

Table 1. VFC Channel Definitions (continued)

Channel	Definition
4	Double space (lines 1,3,5,7...)
5	Triple space (lines 1,4,7,10...)
6	Half Form*
7	Quarter Form*
8	Tenth space (lines 1,11,21,32...)
9	Bottom of Form
10	Bottom of Form minus one line (BOF-1)
11	Top of Form minus one line (TOF-1)
12	Top of Form
13	Seven space (lines 1,8,15...)
14	Six space (lines 1,7,13...)
15	Five space (lines 1,6,11...)
16	Four space (lines 1,5,9...)

* VFC channels 6 and 7 (half form and quarter form) are computed based on the desired form length. In the formulas that follow, BOF stands for Bottom of Form.

Channel #	Formula	Description
6	$(BOF + 1)/2 + 1$	Half Form line #
7	$(BOF + 3)/4 + 1$	First Quarter Form line #
7	$(BOF + 1)/2 + 1$	Second Quarter Form line #
7	$3 * (BOF + 1)/4 + 1$	Third Quarter Form line #

For example, to determine which line on the page should contain the definition for channel 6 (Half Form) for a form with the Bottom of Form (channel 2) defined as print line 60, use the following equation:

$$\begin{aligned} \text{Half Form line \#} &= (60 + 1)/2 + 1 \\ &= 30.5 + 1 \\ &= 31.5 \end{aligned}$$

The fraction is dropped, leaving 31 as the line to be defined as the Half Form line. To calculate where the third Quarter Form line should be defined, use the following equation:

$$\begin{aligned} \text{third Quarter Form line \#} &= 3*(60 + 1)/4 + 1 \\ &= 183/4 + 1 \\ &= 45.75 + 1 \\ &= 46.75 \end{aligned}$$

The fraction is dropped, leaving 46 as the line to be defined as the third Quarter Form line. The first and second Quarter Form lines are calculated in a similar manner.

Programs can send VFC commands to the printer in a variety of ways. Some examples are the FWRITE and FCONTROL intrinsics. When the printer receives a VFC command from the program, it refers to the image of the VFC file that has been downloaded into its memory. The carriage control directives used to select the VFC channels are listed in the MPE Intrinsics Manual under the FWRITE intrinsic and range from %300 to %317 ("% denotes octal). For example, if a program issued a %304 carriage control command to the printer (%304 selects VFC channel 5 which is triple space), the printer would start at its current print line and look down the VFC image to find the next occurrence of a "1" in VFC channel 5. It would then advance paper to that line. This is called "slewing" paper and is sometimes more efficient than stepping paper on a line by line basis. The action taken by the printer when a VFC channel command is received is listed in the following table.

Table 2. Printer Action When a VFC Channel is Selected

Channel	Action Taken
1	Slew paper to the top of the next form
2	Slew paper to the bottom of the form
3	Slew paper to the next line
4	Slew paper to the next double space line
5	Slew paper to the next triple space line
6	Slew paper to the next half page line
7	Slew paper to the next quarter page line

Table 2. Printer Action When a VFC Channel is Selected (continued)

Channel	Action Taken
8	Slew paper to the next tenth space line
9	Slew paper to the bottom of the form
10	Slew paper to one line previous to the bottom of the current form
11	Slew paper to one line previous to the top of the next form
12	Slew paper to the top of the next form
13	Slew paper to the next seventh space line
14	Slew paper to the next sixth space line
15	Slew paper to the next fifth space line
16	Slew paper to the next fourth space line

The actual number of lines that the printer will move is dependent upon the current line of print. For example, if the printer was on a line defined as a triple space line (VFC channel 5) and a command was received to slew to the next occurrence of a triple space line, the printer would advance three lines. If the current line of print was on a line not defined as a triple space line, the printer would advance one or two lines, depending where the next triple space line was defined.

Format of the VFC File

The VFC file is built using the Editor and is kept unnumbered. Three parameters can be specified in this file: MARGIN=, MODE=, and VFC. These parameters are placed on separate lines at the beginning of the file; MARGIN= and MODE= are optional, but, if used, should appear before VFC. All text in the Editor file should begin in column 1. Do not add spaces or blank lines between the parameters or the page image. This may make the VFC file more readable for the user, but the system and printer will not interpret the VFC file correctly.

NOTE

Certain limitations exist in using the MODE= and MARGIN= parameters. First, MODE= cannot be used in a VFC Editor file for an HP 2608A. Secondly, MARGIN= can cause data on the right hand side of the printout to be lost. A difference exists in the way that the columns are numbered for the different printers. The physical left margin for the 256x printers is column "0". The physical left margin for the 2608A/S is column "1".

Following is the format of the three parameters:

MARGIN=nn

The value nn is an integer between 1 and 16, inclusive, and specifies the left margin indentation.

The HP 2608A hardware documentation that comes with the printer discusses a "margin offset" which varies from 0 to 15. This offset is not the same as the MARGIN= parameter, because the software compensates for the hardware offset of nn+1.

MODE=

TRANSPARENT
FEATURE

Specifies that control characters and escape sequences are printed as part of the normal data stream instead of being executed. FEATURE allows the printer to act on these control characters and escape sequences. MODE= is valid only on the HP 2608S and the HP 256x, and is ignored by the 2608A. The default is the MODE specified by the subtype for the device in the system I/O configuration. Subtype 9 is for FEATURE mode and 13 is for TRANSPARENT mode. The MODE= parameter in the VFC file allows the user to temporarily override the device subtype for the 2608S and 256x printers.

VFC,x,y,string

The value of x is either 6, 8, or blank, and specifies print line spacing in lines per inch. Default (blank) is six lines per inch; if a blank is used, a comma (,) must be used as a place holder. Note that a comma must always follow "VFC".


The value of y is an integer between 0 and 127, inclusive, and specifies the number of lines (rows) in the VFC pattern. This number does not include the lines used by the MARGIN=, MODE=, or VFC parameters. If "0" is specified, the printer will reset its internal VFC to the default state, including lines and pages.

The string is an optional comment field that may be used to describe the VFC file. If used, it must be separated from y by a comma.

After these three parameters, each line in the VFC file corresponds to a line on the special form. A series of "1's" and "0's" are used to define each of the 16 channels for each of the lines on the form. A "1" in a column (channel) indicates that the channel definition is valid for that line. A "0" means that the channel is not valid for that line. A line may have multiple channels defined.

Some of the channels have a special meaning to MPE subsystems, and complications may arise if these channels are not defined in the VFC file. The System Operation and Resource Management Reference Manual contains a list of these in Chapter 8, Special Considerations for Peripheral Devices.

An example of an individual record of the page definition portion of a VFC file is shown below. The line shown in the example happens to be for the first line defined on the form, since a "1" is defined in column 1 (column 1 = channel 1 = Top of Form).

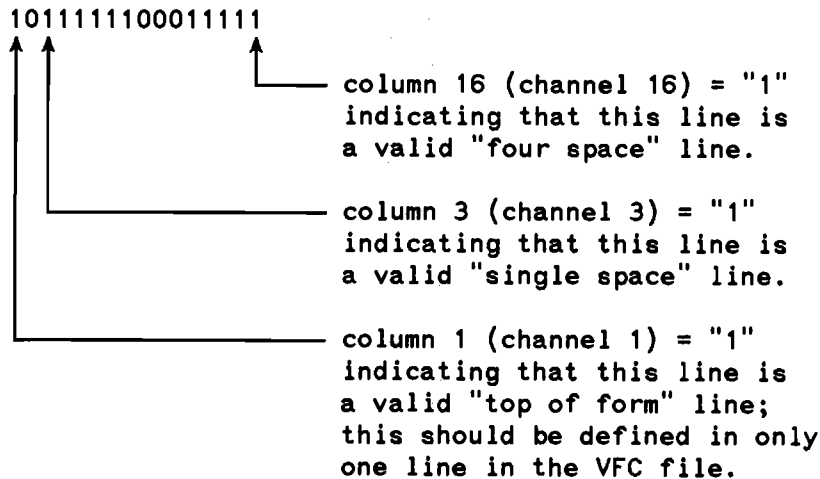

Example 1

A simplified VFC file can be designed to specify a non-standard form length and not take advantage of channels 4 through 16. This is handy if the program only issues line feeds and form feeds. Line feeds (single space) access VFC channel 3 and form feeds access VFC channel 1. The program is responsible for ensuring that the proper number of line feeds is issued to position the paper on the correct line. An example of this type of VFC file is shown below for a four inch form to be printed at 6 lines per inch.

Editor Line Number	Column Numbers (Channels)
	1111111
	1234567890123456
1	VFC,6,24
2	101
3	001
4	001
5	001
6	001
7	001
8	001
9	001
10	001
11	001
12	001
13	001
14	001
15	001
16	001
17	001
18	001
19	001

20	001
21	001
22	001
23	001
24	001
25	011

The first line in the simplified VFC file has "VFC,6,24", indicating that the form is to be printed at 6 lines per inch and is 24 lines long (6 lines/inch * 4 inches = 24 lines). The second line containing "101" is specifying that this line is the top of the form ("1" in column 1) and a valid single space line ("1" in column 3). The rest of the lines contain "001" indicating that each line is a valid single space line. The last line contains "011", indicating that this line is defined as the bottom of the form ("1" in column 2) and also is a valid single space line ("1" in column 3). If the program issues a call to any other channel, an error will occur indicating that the printer was told to access an undefined VFC channel. This VFC example does not have an "unprintable" top and bottom margin area defined. A later example shows how to implement this feature. The channels not explicitly specified in the VFC file (channels 4 - 16 in the above example) are treated as "0's" by the printer.

Example 2

The following is an example of a VFC file for a 6 inch form to be printed at 6 lines per inch with all of the channels defined in their proper locations.

Editor Line Number	Column Numbers (Channels)
	1111111
	1234567890123456
1	VFC,6,36
2	1011111100011111
3	0010000000000000
4	0011000000000000
5	0010100000000000
6	0011000000000001
7	0010000000000010
8	0011100000000100
9	0010000000001000
10	0011000000000001
11	0010101000000000
12	0011000100000010
13	0010000000000000
14	0011100000000101
15	0010000000000000
16	0011000000001000
17	0010100000000010
18	0011000000000001
19	0010000000000000
20	0011111000000100
21	0010000000000000
22	0011000100000011
23	0010100000001000

24	0011000000000000
25	0010000000000000
26	0011100000000101
27	0010000000000010
28	0011000000000000
29	0010101000000000
30	0011000000001001
31	0010000000000000
32	0011100100000110
33	0010000000000000
34	0011000000000001
35	0010100000000000
36	0011000001000000
37	0110000010101010

The first line in the file, "VFC,6,36", indicates that the page definition that follows is for printing at 6 lines per inch and is 36 lines long (6 lines/inch * 6 inches = 36 lines). The remainder of the lines in the Editor file each correspond to a line on the form. The first line is the top of the form, so a "1" is placed in columns 1 and 12. This line is also the starting point for defining some of the other channels (double space, triple space, etc.), so a "1" is placed in columns 3,4,5,6,7,8,12,13,14,15, and 16. Please refer to Table 1 for definitions of the channels. Each line is a valid single space line, so a "1" is placed in column 3 for all lines. Starting from the first line, every other line is a valid double space line, so a "1" is placed in column 4 for every other line. The same approach is taken for every third, fourth, fifth, sixth, seventh, and tenth line (columns 5,16,15,14,13, and 8, respectively). The last line is the bottom of the form, so a "1" is placed in columns 2 and 9. The next to the last line is "one line previous to bottom of form", so a "1" is placed in column 10. In this example, the bottom of the form happens to be "one line previous to top of next form", so a "1" is placed in column 11 of the last line. Channels 6 and 7 (half page and quarter page) depend upon the length of the form. The half page definition for this form was placed in Editor line number 20 and the quarter page definitions were placed in lines 11,20, and 29.

Example 3

The previous example had all lines defined as valid printable lines, because there was a "1" in column 3 (channel 3) for each line. A VFC image can include non-printable lines to allow for a margin between each form. The following example shows a VFC image for a 5 inch form to be printed at 8 lines per inch. The last 8 lines will not contain a "1" in channel 3. This will allow a one inch margin between the printing on each form. The paper on the printer can then be physically positioned so that the first line of print starts one half inch from the top of the page, resulting in one half inch of unprinted area at the top and bottom of each page.

Editor Line Number	Column Numbers (Channels)
	1111111
	1234567890123456
1	VFC,8,40
2	1011111100011111
3	0010000000000000
4	0011000000000000
5	0010100000000000
6	0011000000000001
7	0010000000000010
8	0011100000000100

9	0010000000001000
10	0011001000000001
11	0010100000000000
12	0011000100000010
13	0010000000000000
14	0011100000000101
15	0010000000000000
16	0011000000001000
17	0010100000000010
18	0011011000000001
19	0010000000000000
20	0011100000000100
21	0010000000000000
22	0011000100000011
23	0010100000001000
24	0011000000000000
25	0010000000000000
26	0011101000000101
27	0010000000000010
28	0011000000000000
29	0010100000000000
30	0011000000001001
31	0010000000000000
32	0011100101000110
33	0110000010000000
34	0000000000000000
35	0000000000000000
36	0000000000000000
37	0000000000000000
38	0000000000000000
39	0000000000000000
40	0000000000000000
41	000000000100000



The first line in this example, "VFC,8,40", indicates that the page definition that follows is for printing at 8 lines per inch and is 40 lines long (8 lines/inch * 5 inches = 40 lines). The bottom of form (channels 2 and 9) has been defined in line 33. In this example, channel 11 (one line previous to top of next form) is not on the same line as bottom of form like it was in the previous example. The half page and quarter page channels (6 and 7) have been calculated for the printable area and do not include the one inch margin area at the bottom. Channel 10 (one line previous to bottom of form) has been specified in line 32. The rest of the channels are defined in the same manner as in the previous example.

Example 4

This last example will be for a 3-1/4 inch form to be printed at 8 lines per inch. This introduces a potentially complicating factor: stopping gracefully after running out of paper. The 2608S and 256x printers allow the physical page length to be set from 2.0 to 16.0 inches, in 1/2 inch increments. The 3-1/4 inch form does not align on a physical page setting. The front panel setting, in this case, should be set to 6.5 inches. This is equal to two special form lengths and will make it easier to realign the forms if the printer runs out of paper.

Editor	Column Numbers (Channels)
Line Number	1111111
	1234567890123456
1	MODE=FEATURE
2	VFC,8,26
3	1011111100011111
4	0010000000000000
5	0011000000000000
6	0010100000000000
7	0011000000000001
8	0010000000000010
9	0011100000000100
10	0010001000001000
11	0011000000000001
12	0010100000000000
13	0011000100000010
14	0010000000000000
15	0011100000000101
16	0010011000000000
17	0011000000001000
18	0010100000000010
19	0011000000000001
20	0010000000000000
21	0011100000000100
22	0010000000000000
23	0011001100000011
24	0010100000001000
25	0011000000000000
26	0010000000000000
27	0011100001000101
28	0110000010100010


This example includes the optional parameter, `MODE=FEATURE` to allow the printer to act on control characters and escape sequences embedded in the data. `VFC,8,26` indicates that the page definition that follows is for printing at 8 lines per inch and is 26 lines long (8 lines/inch * 3-1/4 inches = 26 lines). Editor lines 3 through 28 define the page image with the channels defined as specified in Table 1. There are no unprintable lines in this definition, so any top and bottom margins desired are the responsibility of the program.

The intent of this discussion was to clear up some of the mystery surrounding the use of carriage control and VFC files for special forms. In addition, the reference manuals for the individual printers contain information specific to the model of the printer being discussed. The System Operation and Resource Management Reference Manual contains a discussion of VFCs and additional examples in chapter 8, Special Considerations for Peripheral Devices. The MPE V Intrinsic Manual lists octal codes for the carriage control directives as well as some helpful notes about using carriage control.



FOLD

FOLD



NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES



BUSINESS REPLY MAIL

FIRST CLASS PERMIT NO. 1710, SANTA CLARA, CA



POSTAGE WILL BE PAID BY ADDRESSEE

Application Note / RC Q & A Comments
Hewlett-Packard Western Response Center
3300 Scott Boulevard
Santa Clara, CA 95054



FOLD

FOLD

 **HEWLETT
PACKARD** **RESPONSE CENTER QUESTIONS & ANSWERS**

HP 3000 Questions Commonly Received by the North American Response Centers

Q. I have noticed that with HPTREND running on my system, the number of logfiles generated has increased. Why?

A. To perform its analysis, HPTREND requires that LOG TYPE 5 (File Close records) be enabled. Since logging this event increases the number of log records written, the number of logfiles generated will usually also increase. HPTREND runs a program, TRLOGDCP, to capture data from the logfiles. Once HPTREND has analyzed these logfiles you can archive them. Make sure you run any other utilities that need to analyze these files before you purge them from your system.

Q. I have a KSAM file with a file limit of 100,000 records. While adding records to the file, I encountered an EOF condition. LISTF shows the EOF at 100,000 but when I run FCOPY against the file it stops after copying 82,000 records. What has happened to the other 18,000 records, and how can I recover that space?

A. When you delete a record from a KSAM file, it is flagged as deleted but it is not physically removed (The first word is set to -1 [%177777] to indicate a deleted record). Also, deleted records are not reused. Therefore, the space occupied by the deleted records is *not* available for new data. This allows you to recover deleted records later, but it also causes them to accumulate -- 18,000 of them in your case. The only way to "recover" this space is to create a new KSAM file and copy only the active records. Please refer to the KSAM or FCOPY Reference manual for the procedures to remove the deleted records.

Q. I built a KSAM file with one 24-byte key and I specified a key blocking factor of 100. KSAMUTIL show that the actual key blocking factor is 102, why?

A. KSAM uses the requested key blocking factor for all of your keys to determine the largest key block size. This size is then used to set the actual key blocking factor (which may be larger but never smaller than the requested value). This method results in the best use of key file space.

Q. When starting an IMAGE application I received a condition word value of -9 on a DBOPEN call. The message stated MPE ERROR %2002 RETURNED BY GETDSEG OF 32764 WORDS. What does this mean?

A. The IMAGE condition word -9, MPE ERROR GETDSEG 32764 WORDS is informing you that the DBOPEN intrinsic was unable to obtain the required number of words for the DBCB (Data Base Control Block) from either the DST (Data Segment Table) or from VM (Virtual Memory).

If you have OPT, you can use the Tables Context to examine the usage of the DST and VM. You can also use the unsupported program TUNER to determine which tables are at maximum usage or approaching maximum usage. If either or both are flagged as near maximum, they should be increased.

You can increase the size of the DST by using SYSDUMP. Virtual Memory can be changed by using the INITATOR/USER dialogue during a system startup, such as a COOLSTART. However, VM

allocation changes for LDEV 1 must be done during a RELOAD. (Please note that you cannot make VM changes using SYSDUMP. The July 1, 1986 issue of *Response Center Questions & Answers* explains this more fully.)

Q. What PARITY do the Hewlett Packard tape drives support?

A. The entire family of Hewlett Packard tape drives that use the standard 2400 ft. tape reel use *odd parity*.

The following is a cross reference chart of the Hewlett Packard tape drives:

<u>Model</u>	<u>Max Tape Length</u>	<u>cpi</u>	<u>Encode</u>	<u>Parity</u>	<u>ANSI Standard</u>	<u>Notes</u>
HP 7970B	2400'	800	NRZI	ODD	X3.22-1983	(note1)
HP 7970E	2400'	1600	PE	ODD	X3.39-1973	(note2)
HP 7974A	2400'	1600	PE	ODD	X3.39-1973	(note3)
		800	NRZI	ODD	X3.22-1983	(note4)
HP 7976A	2400'	6250	GCR	ODD	X3.54-1976	(note5)
		1600	PE	ODD	X3.39-1973	(note5)
HP 7978B	2400'	6250	GCR	ODD	X3.54-1976	(note3)
		1600	PE	ODD	X3.39-1973	(note3)

Glossary:

NRZI (Non-Return-To-Zero-Inverted). Check character used to check the parity of each track in the block.

PE (Phase Encoded). The bits are written as successive magnetic pole reversals. Repeating groups of '1' or '0' bits will have a required reversal placed between the bits.

GCR (Group-Coded Recording). Collecting groups of characters and encoding them prior to writing them on the tape.

cpi Number of Characters stored Per Inch of tape.

ANSI American National Standards Institute.

*note1 Supported on the Series I, II, III systems only

*note2 Supported on the Series I, II, III and 39, 40/42/52, 44/48/58, 64/68/70

*note3 Supported on the Series 39, 40/42/52, 44/48/58, 64/68/70

*note4 800 cpi recording density is optional

*note5 Supported on the Series 37, 39, 40/42/52, 44/48/58, 64/68/70